


BELCHFIRE® Stainless Steel Combustion Chamber

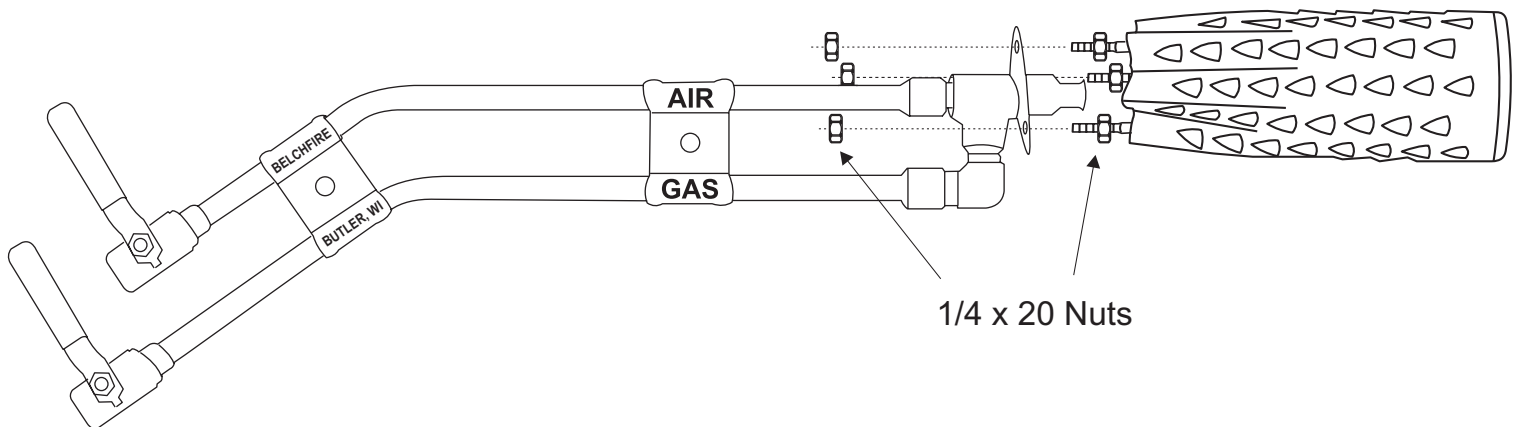

INSTALLATION / REPLACEMENT OF BELCHFIRE STAINLESS STEEL COMBUSTION CHAMBER

REPLACEMENT

Replacement of the stainless steel combustion chamber is accomplished by loosening and removal of the outside 1/4-20 holding nut (one each per mounting screw). After removal, pull chamber off torch and replace with new stainless steel combustion chamber per the instructions below.

INSTALLATION

The stainless steel combustion chamber will have two 1/4-20 nuts per mounting screw. Remove the outside 1/4-20 nut. Adjust the inside locating nuts to the same distance from the end of the chamber. Insert chamber screws into locating holes in triangle flange. Replace outside nuts and tighten.

BELCHFIRE WARRANTY

Belchfire is proud of the quality of the torches that it sells. Because of our confidence in our quality, Belchfire agrees to repair or replace any part or parts which examination proves to be defective in workmanship or material. In order to take advantage of this guarantee, the complete torch must be returned, prepaid, to the factory for examination. This guarantee does not include repair or replacement required because of misuse, abuse, or normal wear and tear. Repairs made by other than authorized factory personnel relieve Belchfire Corporation of further liability under this guarantee.

THIS GUARANTEE IS MADE EXPRESSLY IN PLACE OF ALL OTHER GUARANTEES OR WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.

BELCHFIRE® CORPORATION
4916 North 125th Street
Butler, WI 53007
Phone: (262) 783-1500
Fax: 1-800-387-4491
www.belchfire.com